

# Use and Maintenance

## - BU800

ATTENTION! Do not use the machine before you have read and understood the User Manual



1. If the battery is on charge, check if the battery charger indicator shows a green light (it means the battery is fully charged)



2. Disconnect the battery charger from electrical mains



3. Tilt the machine in order to have access to pad retainer



4. Rotate the retainer and remove it from the machine.



5. Remove the pad and check the status. If needed, change it. Be sure to use correct burnishing pad depending on floor type and application



6. Retighten the pad retainer as tight as possible



7. Raise the back of the machine to lower the pad housing



8. Remove the cover of passive dust collector and replace dust bag if it is full or torn



9. Turn key switch on.



10. Activate pad power switch to position I (On)



11. Press switches on the handle to activate pad rotation and start burnishing, remember to always keep the machine moving. Too long time on the same surface can damage the floor



The pad pressure is set at factory for optimal burnishing with most pad and finish combination. If you need to adjust pad pressure manually, call for a qualified service technician



13. Once finished the work, switch off pad power button and key switch



14. Charge the batteries by connecting the on board charger to electrical plug

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE GREY SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS